




**Electronic Scale**  
Instructions for use




## ■ Battery

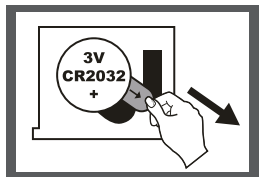

1 x 3V lithium battery (CR2032).


Please remove the isolation sheet from the battery contact before first use.

## ■ To install / Replace battery

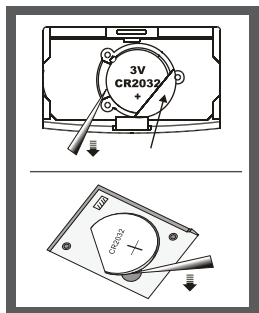

- 1- Open battery case cover on the back of scale.
- 2- Take out the used battery with the help of a sharp object, as shown in picture.
- 3- Install new battery by putting one side of the battery beneath the battery compartment and then pressing down the other side.

## ■ Auto convert time indicator

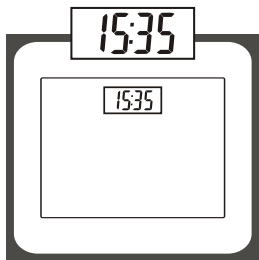


When you step off the scale, it will automatically come back to real time display after 20 seconds of no operation.

## ■ Operation



### Step 1

Put the scale on a hard and flat surface. Avoid carpet or soft surfaces.

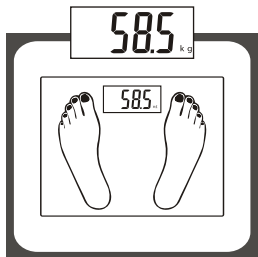


### Step 2


Gently step on the scale, then the scale will automatically turn on. Stand evenly on the scale without moving and wait until your weight shown on display is stable and locked.

---

## ■ LCD Display

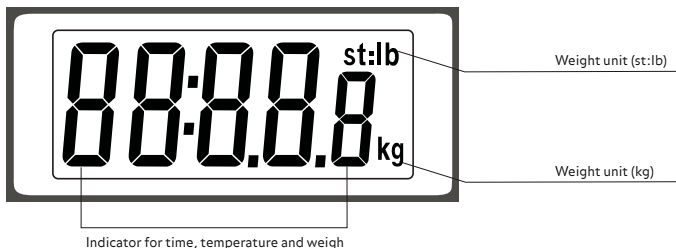


## ■ Conversion buttons

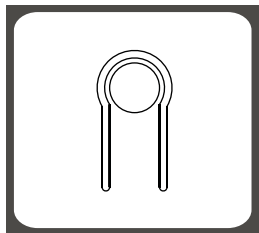

### **Unit conversion button**

You will find the unit conversion button behind the scale, at the top middle part.

Press this button when scale is power on to convert weight unit to metric (kg) or imperial (lb).

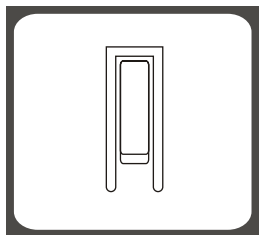


### **Temperature button**

You will find the temperature button behind the scale, at the top left side.

Convert to temperature mode by pressing this button.


## ■ To set time

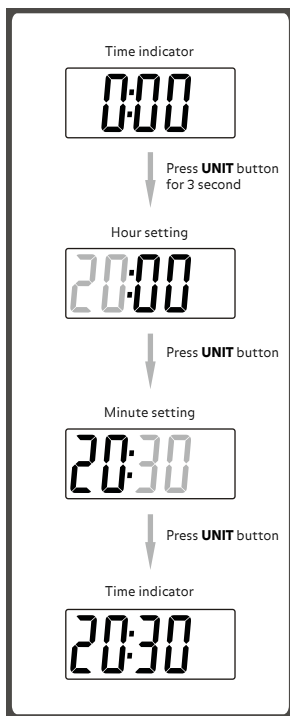

Each time you change the battery, you will need to re-set real time.


During time display mode, enter time by pressing unit conversion button for 3 seconds. The numbers will flash. Then, press temperature button to advance value and press on unit conversion button to change to minute setting. Once time is selected, press back on unit conversion button to confirm time.

## ■ Temperature display

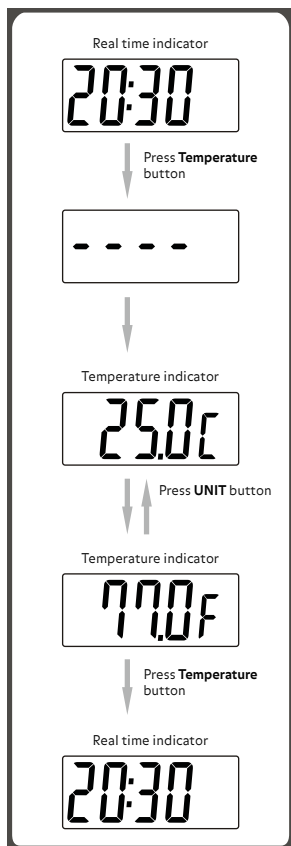

## ■ Use to decorate


This scale is perfect to decorate your favorite room by adding a picture, a drawing from your kid or even a little sentence to motivate you before getting on the scale.

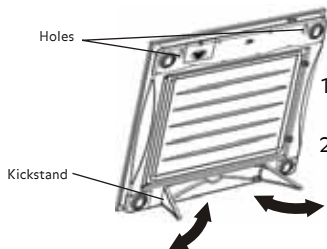

1. This scale can stand on the desk by using the kickstands behind the scale.
2. This scale can be hung on the wall by the holes which are located on the back of the scale.

---


## ■ To replace picture

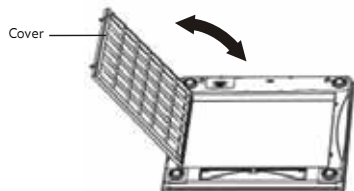

Open picture frame cover on back of scale for replacement.


---

## ■ Warning indication



### Overload indication

Scale overload. Maximum weight capacity is 330 lb / 150 kg. Please step off to avoid damage.



### Low battery indication

Battery power is low. Please install new battery.



### Re-test

Display "E" when you step off the scale, means there was an error in the weigh reading. Please re-test.

## **ADVISE FOR USE & CARE**

1. The glass platform will be slippery if it is wet.
2. Keep standing still during the course of weighing.
3. **DO NOT** strike, shock or drop the scale.
4. Treat the scale with care as it is a precise instrument.
5. Clean the scale with a damp cloth and avoid water getting inside the scale. **DO NOT** use chemical or abrasive cleaning agents.
6. Keep the scale in a cool place with dry air.
7. Always keep your scale in a horizontal position.
8. If the scale does not turn on, check whether battery is installed or battery power is low. Replace battery.
9. If there is an error message on the display or if the scale does not turn off, remove the battery for about 3 seconds, then install it again. If you cannot resolve the problem, please contact your dealer for consultation.
10. Not for commercial use.



**[www.facebook.com/starfrit](http://www.facebook.com/starfrit)**



PRINTED IN CHINA FOR: ATLANTIC PROMOTIONS INC.  
LONGUEUIL (QUEBEC) J4G 1V6  
CUSTOMER SERVICE: 1-800-361-6232 / MTL AREA: (514) 871-1095